


LCD SERIES SAFE USER INSTRUCTION MANUAL

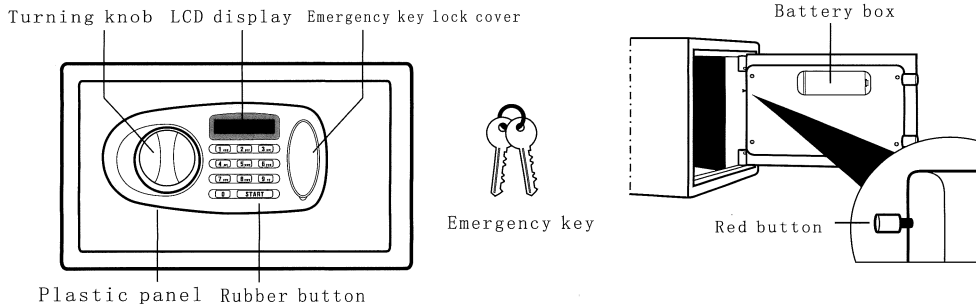

Open safe for the 1st time: Use the emergency system

Emergency system

Remove the emergency key hole cover located in the right of the plastic panel, and insert the emergency key into the emergency key hole, turn it to the left and turn the knob to the right, the safe will open. During the normal use, if the battery is out of power, the user forgets the code or the electronic system malfunctions, the user can also open the safe using the emergency system.

Install battery

Remove the battery box cover on the back of door, install 4XAA batteries as instructed (4XAAalkaline cell is recommended), and then cover the battery box cover.

Setting and changing of personal code:

When the door is open, press button "START", the LCD display will show "-----", then you can input any 6 digits code you want and press the red button inside the door, the LCD display will show the 6 digits code you input, at the same time there will be music sound, it shows the success of personal code setting(the old personal code disappear at the same time)

Setting and changing of management code

When the door is open, press the red button inside the door, the LCD display will show "----", press button "START", then you can input any 6 digits code you want and r, the LCD display will show the 6 digits code you input, at the same time there will be music sound, it shows the success of management code setting(the old management code disappear at the same time)

Error indication:

If the user inputs wrong 6 digits code, the LCD display will show "ERROR" and there will be "BEEP,BEEP,BEEP" sound, if the user inputs the wrong code for continuous 5 times, the system will be locked for 2 minutes and 30 seconds and there will be continuous "beep, beep, beep---" warning sound.

Low-bat indication

When the user press "START" or red button, if the LCD display shows "LO-BAT", it means the battery is in "LO-BAT", the user needs to change the battery in time.